

How to reset a PSI 6000 PIN?

In order to reset a forgotten PIN for a PSI 6000 power supply, perform following steps:

1. Find the model name of your power supply, either on the front or on the type sticker
2. Switch you power supply on, it will „ask“ to enter the PIN and show PSWD:
3. Enter master PIN with the keyboard, which will reset your PIN:

Model	Master PIN
PSI 6018-05	6821
PSI 6018-10	6831
PSI 6032-02	6812
PSI 6032-03	6822
PSI 6032-06	6832
PSI 6072-02	6823
PSI 6072-03	6833
PSI 6150-01	6834

4. Press ENTER button and display should display MAX VOLT
5. Use the ARROW buttons on the keyboard to select KEY LOCK SET from the menu
6. Press ENTER button and then press ENTER button again.

Your device is now unlocked (LOCK symbol is removed).